


DOMESTIC HOT WATER HEAT PUMP

WIFI USER MANUAL

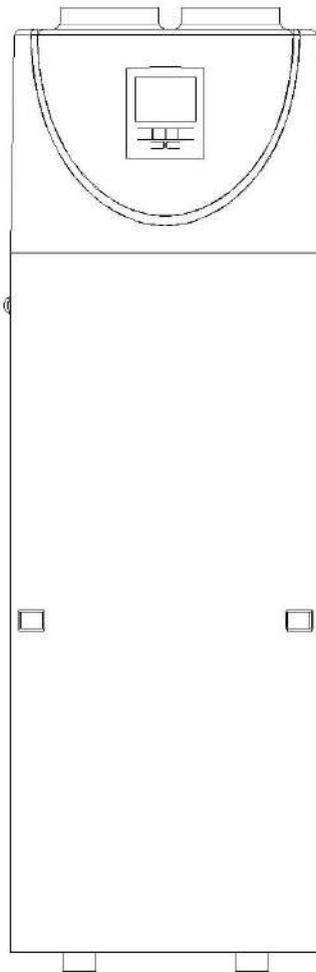

IMPORTANT NOTE:

Thank you very much for purchasing our product,
Before using your unit, please read this manual
carefully and keep it for future reference



WIFI User Manual


1. APP download

Go to APP store or Play store and search “Smart Life”, download and install the APP, then start it.




2. Register

- If you are new user, you will need registering: Register → Input your mobile phone number → Get verification code → Input the verification code → Set the password → Complete.

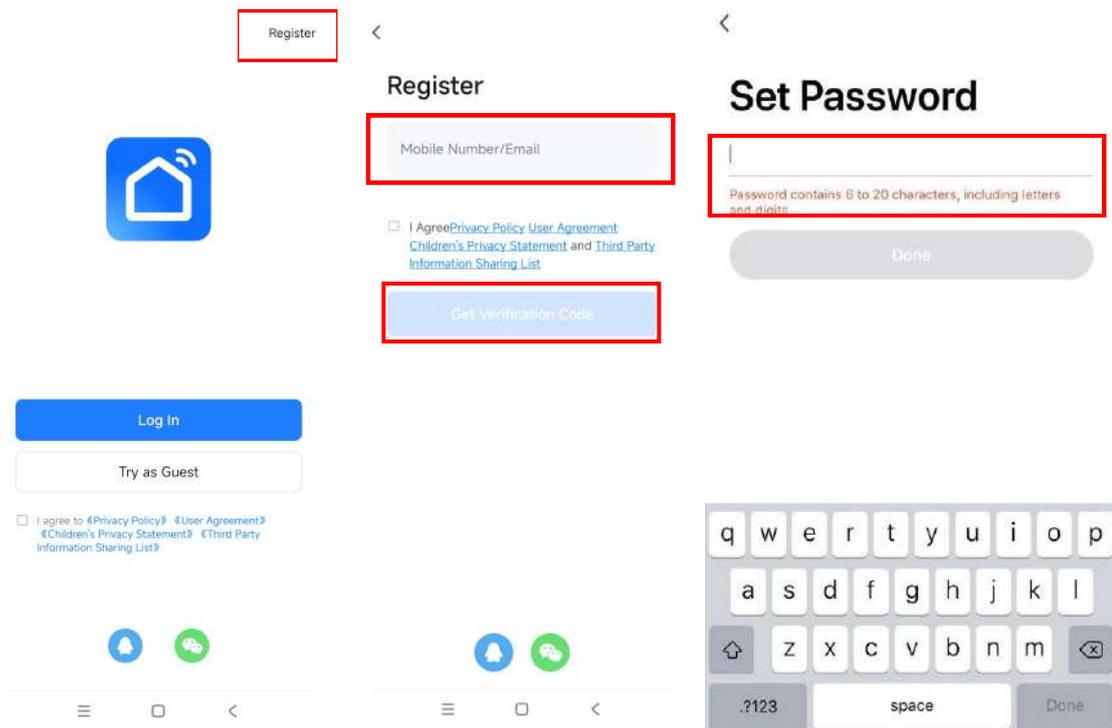


3. Login



1) Login with existing account.

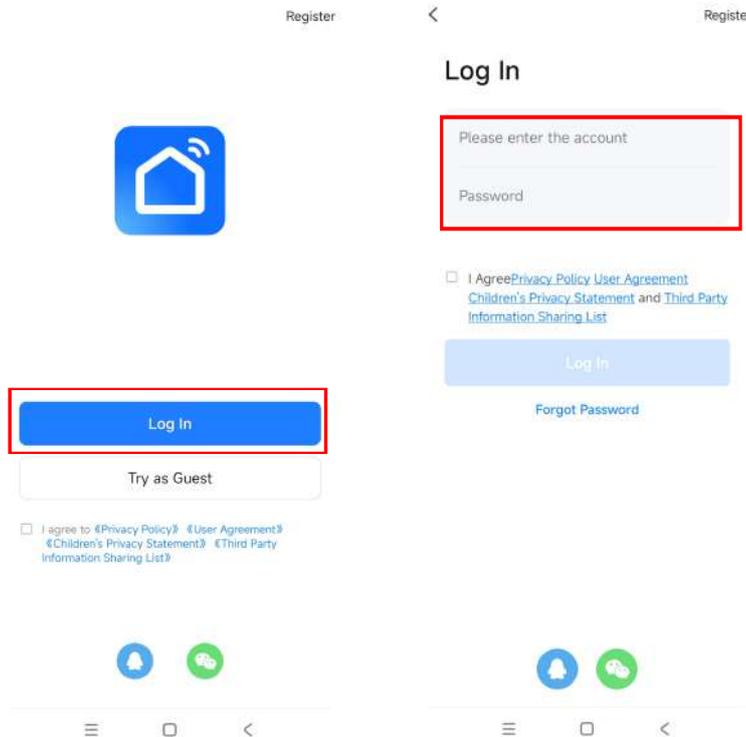

2) If you have forgotten your password, you can select the verification code to log in. Select "Login with SMS Verification Code", input the mobile phone number, and click "Get Verification Code", then input the verification code you got by SMS.

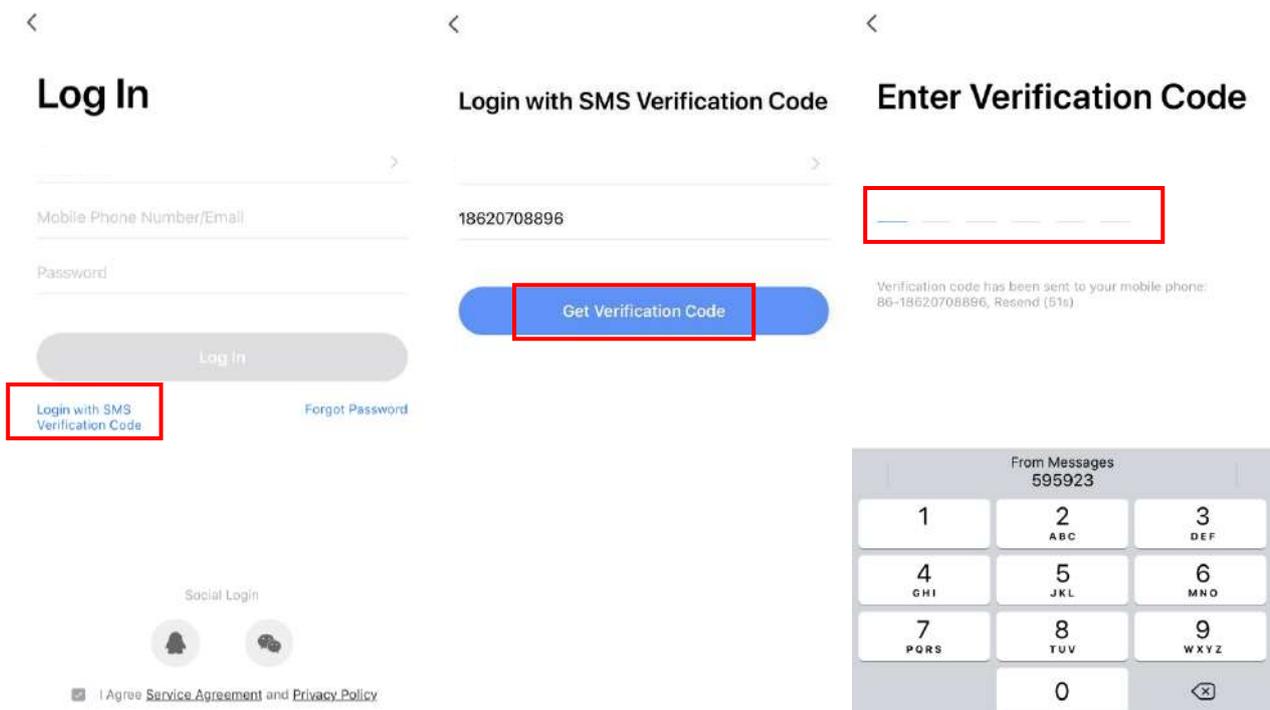

3) After creating a family or logging in, enter the Smart life app interface, can do family or room management as below pictures shown.

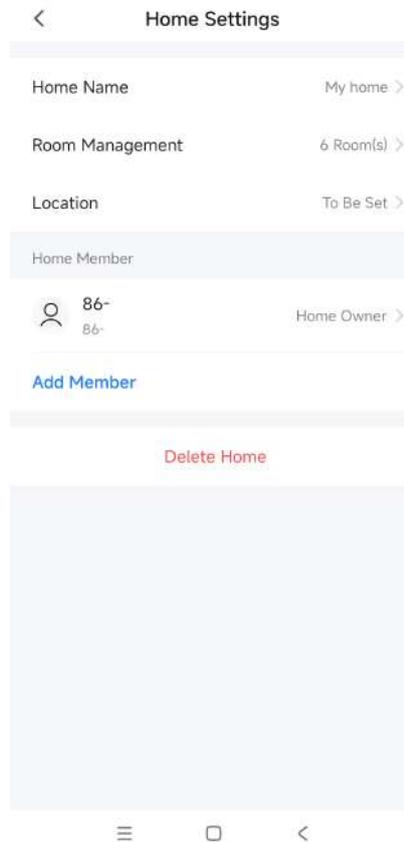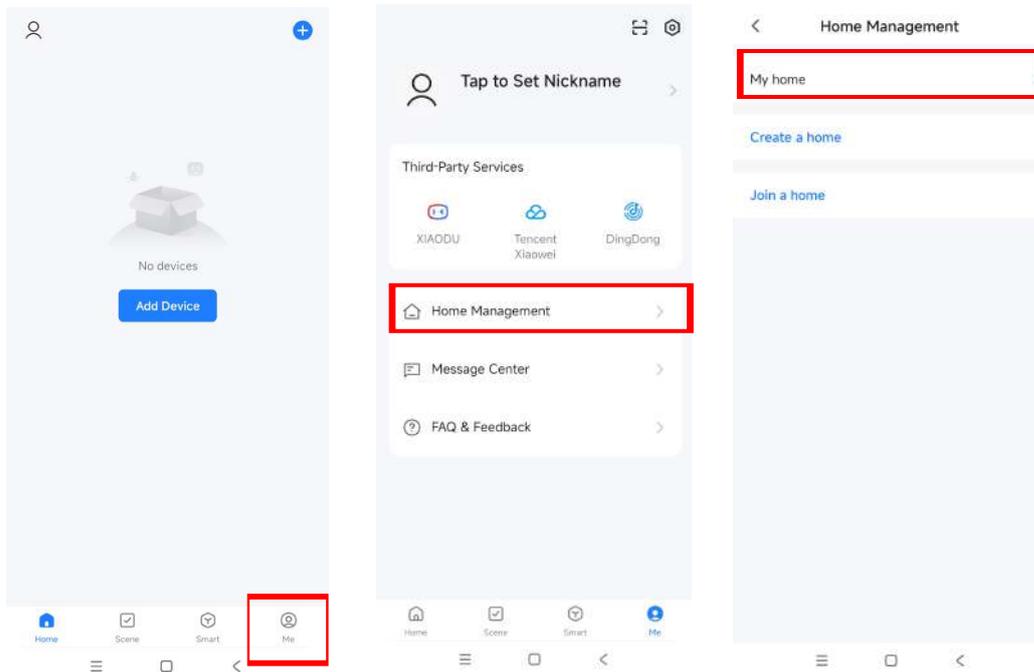

4. WIFI Module Configuration Step:


◆ Step 1:

Manually enter the intelligent network connection mode: press button “▲” + “” in the control panel 3 seconds, screen will be in quick blinking, it enters intelligent distribution network mode.

If the WIFI module doesn't connect with the network , after 3 minutes, the screen will stop blinking and not be displayed, and the intelligent network connection mode will exit. To re-enter the intelligent network connection mode, it need to press again the button “▲”+“”for 3 seconds;


◆ Step 2:

Make your phone connect to WIFI at good network connection status.

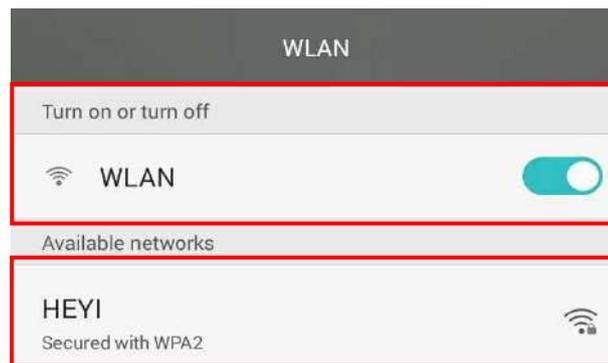


◆ Step 3:

Open the “Smart Life” APP, enter into the main interface, click the button “+” in the top right corner or click the button “Add Device”.The software then automatically searches for nearby devices.

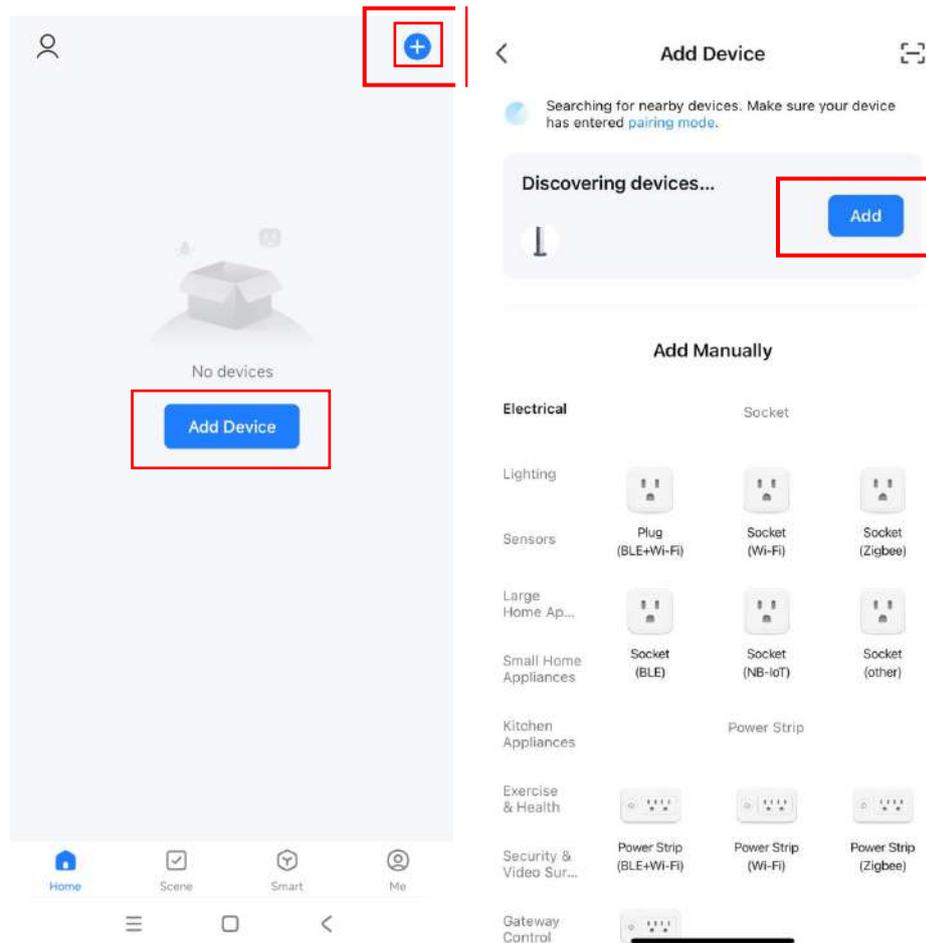


◆ **Step 4:**

After entering the “Add Device” interface, please confirm that the controller has selected the intelligent network connection mode and screen is blinking quickly; Enter into the WIFI connection interface, input the password of WIFI connected in the phone. Click “OK”, then enter into the device connection status, and wait for the loading of 100%.

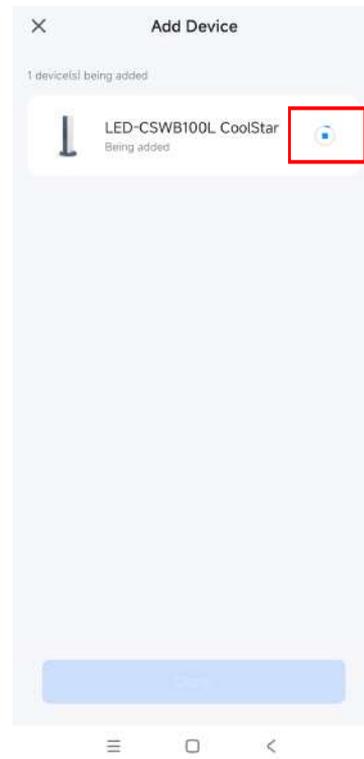


◆ **Step 5:**

After the App successfully connect to the device, as below shown “Device added successfully”, you can change the the device name and set the installing location. Then click “Done”, it will enter into the device operation interface..

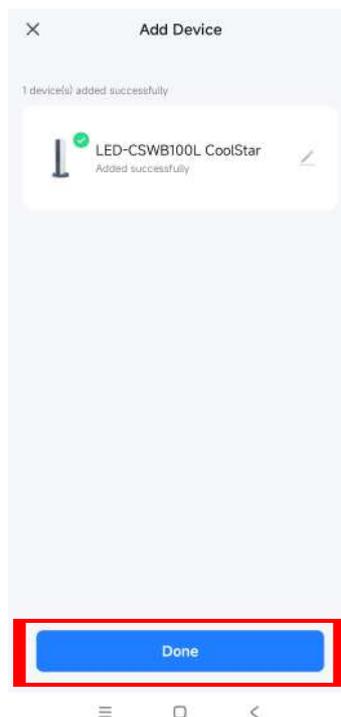


5. APP Function Operation

After the device is successfully added, the user can enter into the device operation interface by going to the main interface and clicking the added device, then below functions can be operated.

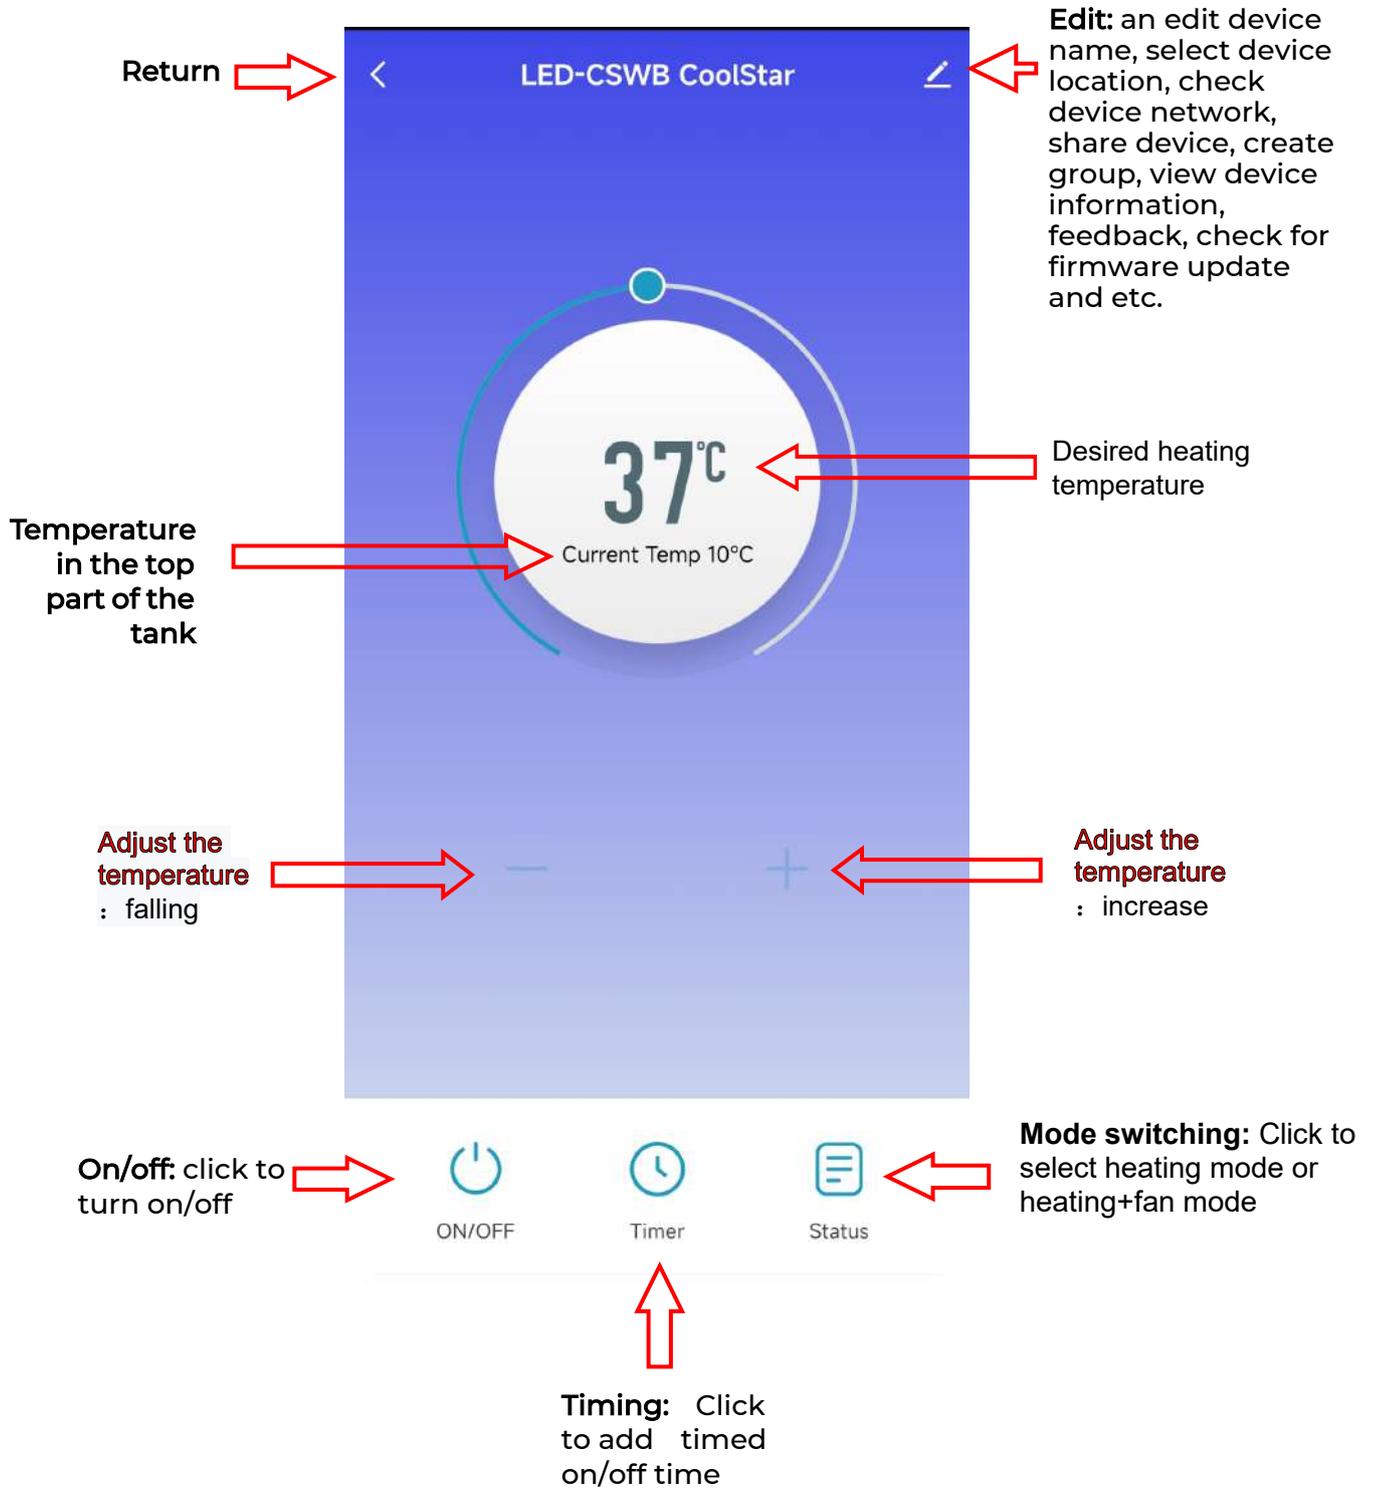


- **Modify the device name**

Click button  and click “Device Name”, can modify the device name.

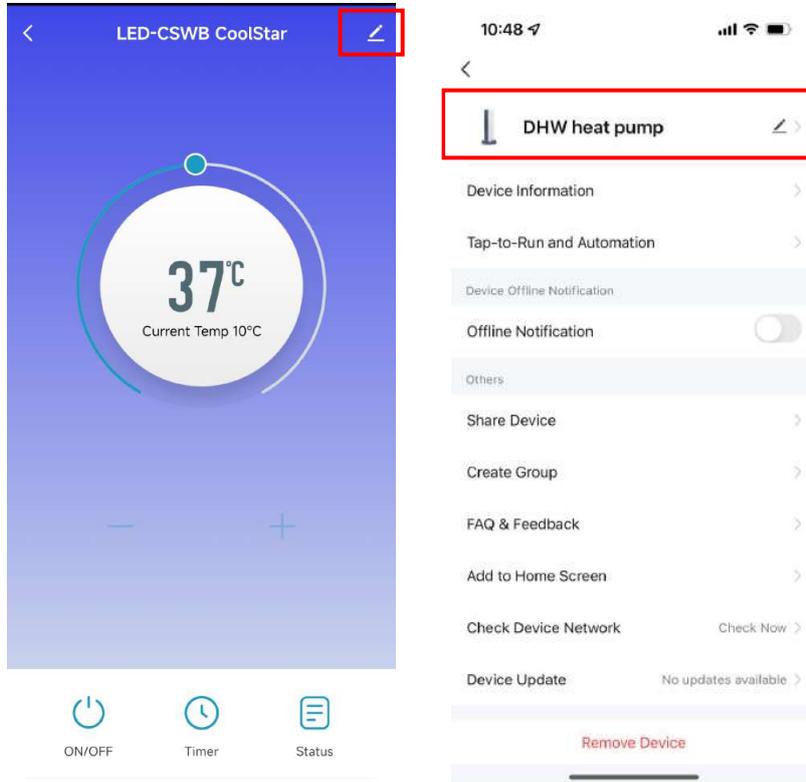


- **Share device**


1) Click button  and click “Share Device”, can share device to other users' account.

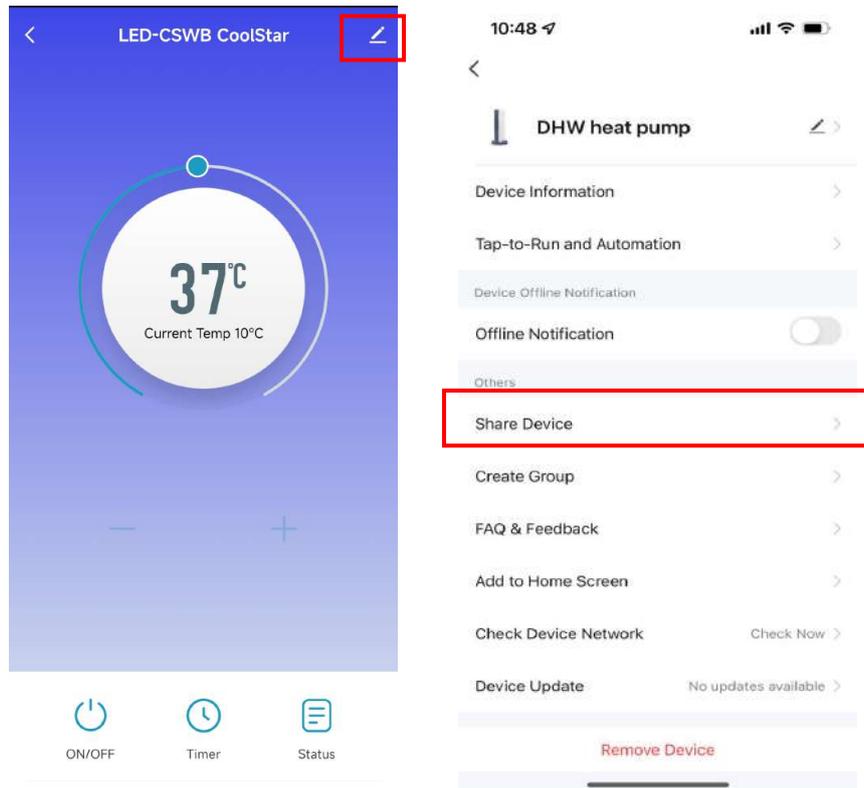

2) Click “Add Sharing” and input the shared account and click “Finish”. The sharing success list shows the newly added account.

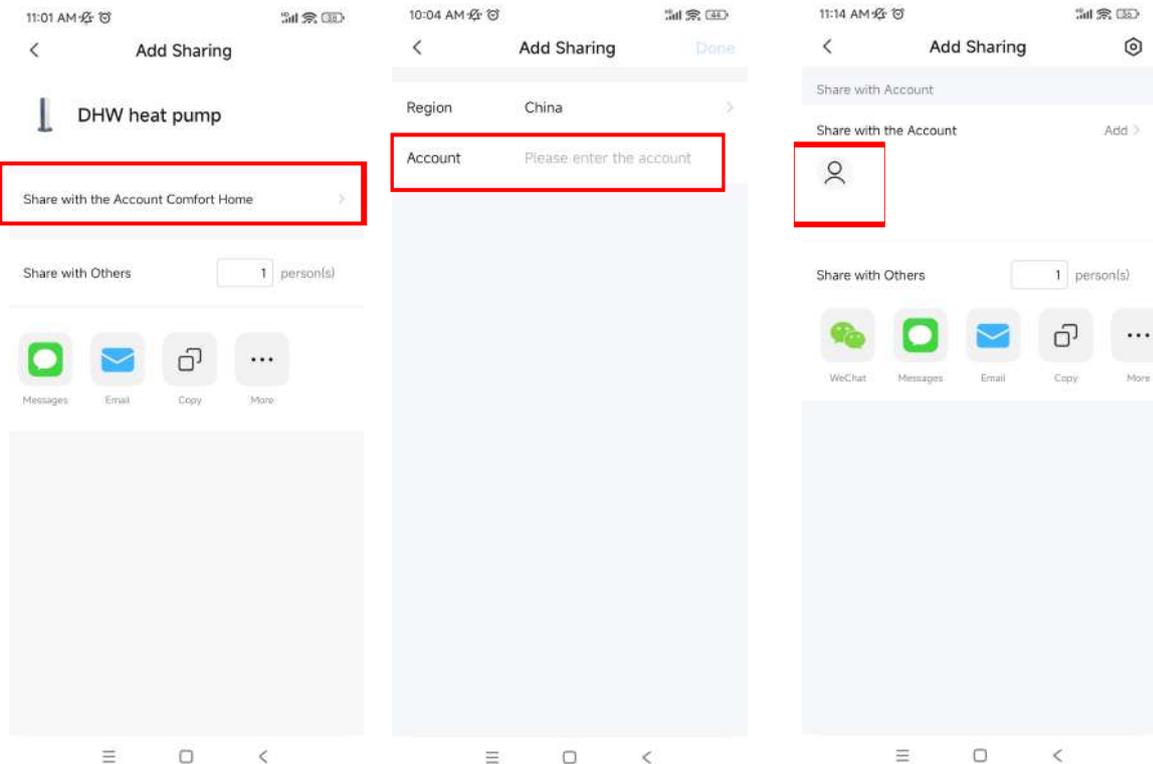


3) The shared account directly adds the shared device, and it can operate the shared device.

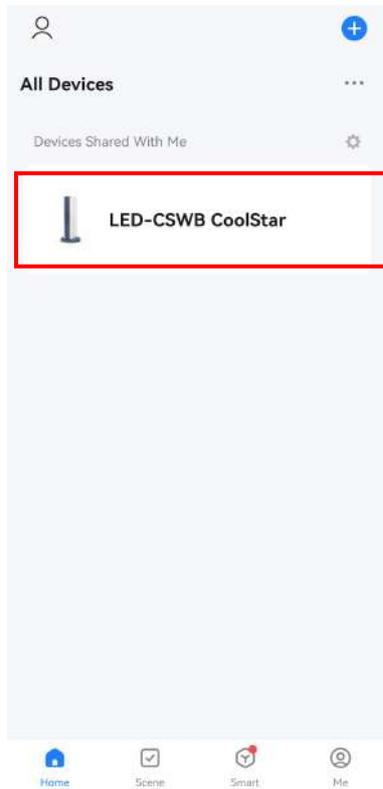

- **Status query**





Click this button "  " to enter the system status query .

Status

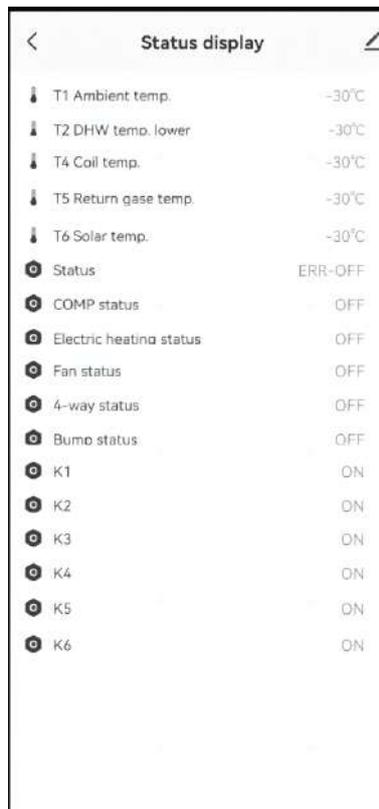

- **Timing settings**


Click “  ” in the main interface of the device operation to enter the timing setting interface, as shown below, click Add Timing; Enter the timing setting, slide the hour/minute up and down to set the timing time, and set the repeating date and on/off, press the upper right corner to save, as shown in the below pictures;

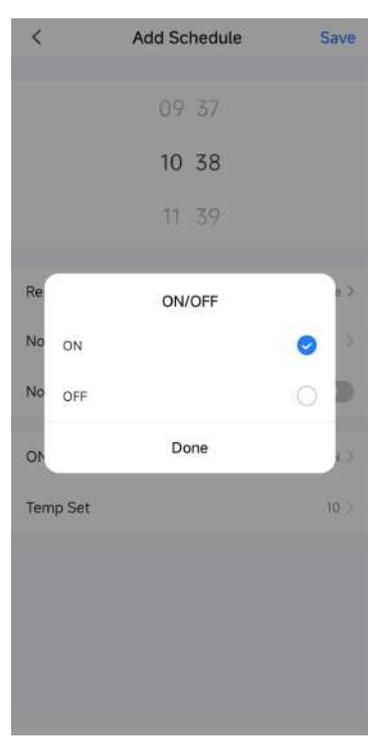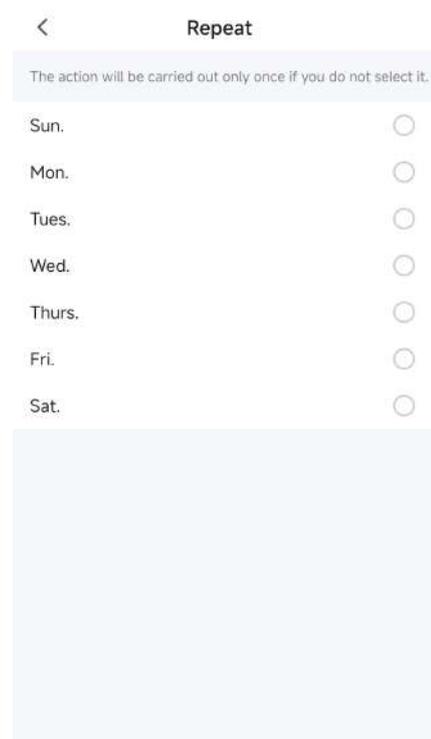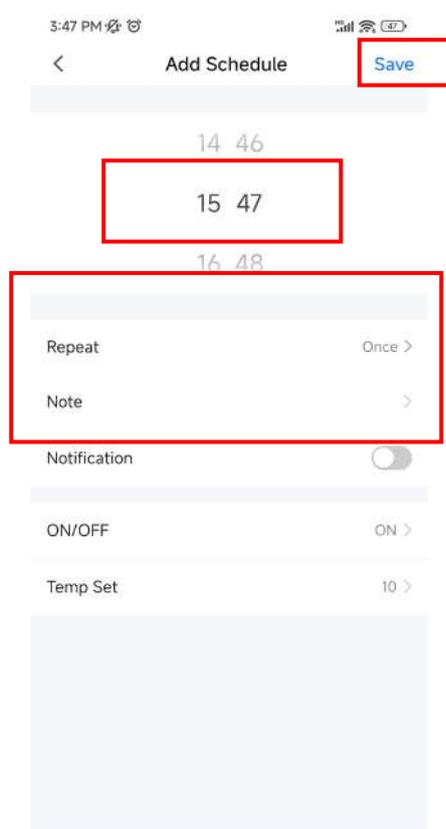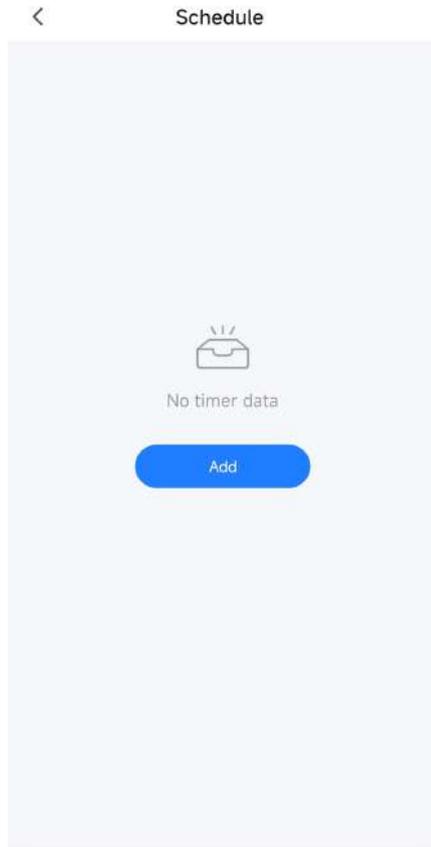

- **Remove Device**

- ✓ **Remove device by APP**

Click “” in the upper right corner of the device operation interface to enter the device details interface. Click “Remove device”, device will be removed and it enters into intelligent network connection mode. The screen will blink for 3 minutes, and the network can be reconfigured within 3 minutes. After 3 minutes, the intelligent network connection mode will exit.

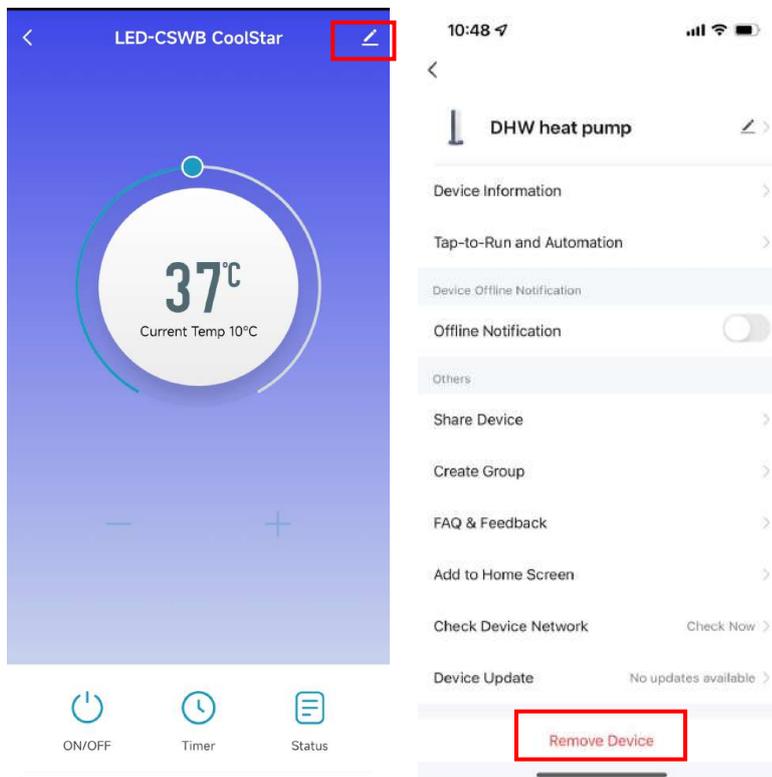

ARCA s.r.l.

Sede legale e produzione caldaie a biomassa

Via I° Maggio, 16 - 46051 San Giorgio Bigarello (Mantova) P.IVA IT 01588670206

Tel.: 0376/372206 - Fax: 0376/374646 - E-mail: arca@arcacaldaie.com - Tlx 301081 EXPMN I

Produzione caldaie a gas

Via Papa Giovanni XXIII, 105 - 20070 San Rocco al Porto (Lodi)

Tel.: 0377/569677 - Fax: 0377/569456